

## Tools Needed

- Drill with 3/16 Drill Bit
- Pop Rivet Tool
- 7/16 Wrench and Socket
- Something to mark holes
- Oil for bolts is suggested to prevent galling



## Installation Instructions


1. Align the metal Mudflap Hanger around the rectangle depression under the rocker panel.
2. Make sure the hanger is squared up to the end of the rocker panel but not touching the fender.



**SOUTHLAND**  
Est. 1985

<https://southlandinternationaltrucks.com/parts-shop/>

3. Once you have the hanger lined up, mark where to drill the 6 holes under the rocker panel.
4. Remove the hanger.
5. Drill 6 holes with 3/16 bit.
6. Line up Metal Hanger with the drilled holes
- \* **Making sure to use the 2 longer Rivets in the middle two holes.**
7. Once the Metal hanger is riveted on, bolt on the provided rubber mudflap with provided hardware.

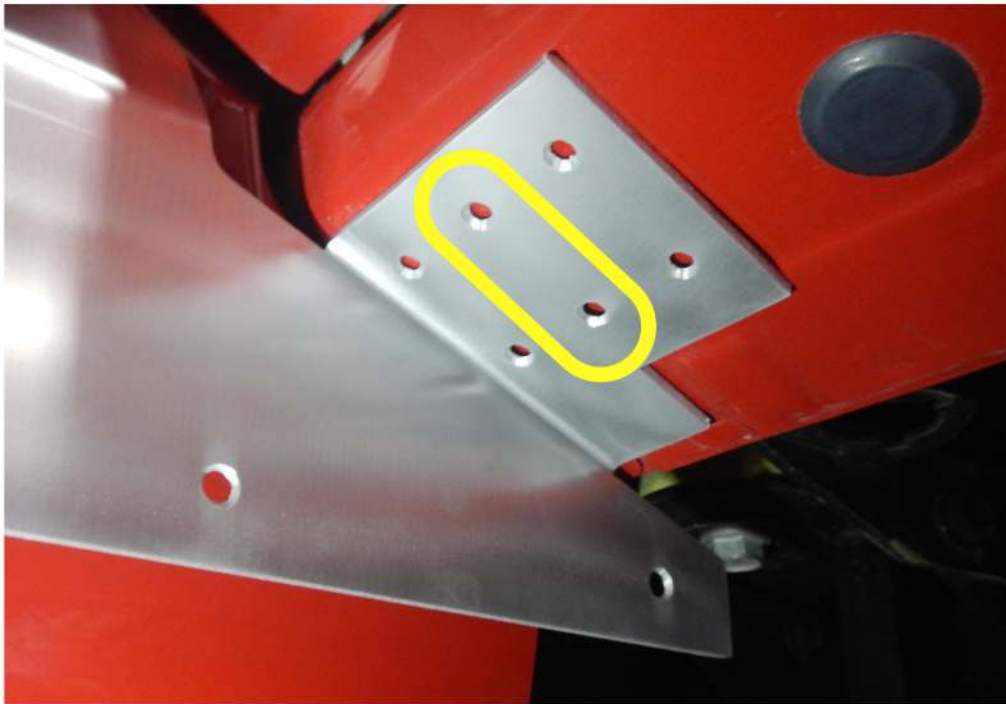

**SOUTHLAND**  
Est. 1985

<https://southlandinternationaltrucks.com/parts-shop/>